

正宝机械

零件图

新昌县正宝纺织机械有限公司

目 录

齿轮·····	01
轴承·····	01
走针部件·····	02
座类·····	04
柱杆·····	06
垫圈·····	08
螺丝·····	09
台面·····	10
板件·····	12
针和梭子·····	14
轴套·····	15
专用件·····	16
气动·····	18
弹簧·····	20
电控·····	21

齿轮



分数齿轮
6274T-1



马达齿轮
6276T-1



手柄齿轮
6279T-1



过桥齿轮
6280T-1



传动齿轮
6284T-1



螺旋伞齿轮
6500S-1



快慢齿轮
6501S-1



离合齿轮
6502S-1



小伞齿轮
6503S-1



 
对齿轮
6504S-2



扎口同步轮 (36齿)
6505S-1



扎口同步轮 (20齿)
6506S-1

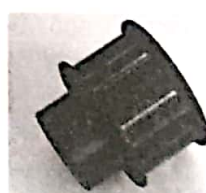


电机同步轮 (18齿)
6507S-1


轴承



 哈夫轴轴承
51101-1

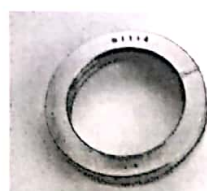

圆筒座轴承
51114-1

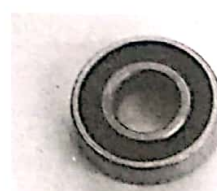 

竖轴轴承
6001RS-1



传动轴轴承
6002RZ-3



台面轴承
6020Z-2



 
棱角控制轴承
627Z-1



分数架轴承
51113-1



离合齿轮轴承
6804Z-1

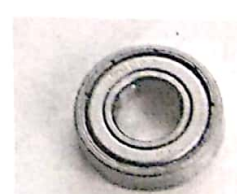

横轴套轴承
6900Z-2



上离合座轴承
6906RS-1



 
同步带压套轴承
696Z-1



上离合座轴承
HK121812-1



分数控制块轴承
CF5-2

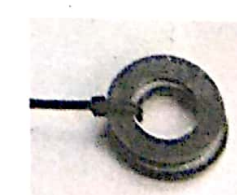

哈夫盘轴承
1528-1

走针部件



中棱角
6001A-1



中上挡块
6002A-1



中下挡块
6003A-1



右棱角
6004A-1



右下挡块
6005A-1



右棱角滑块
6006A-1



左棱角
6007A-1



 
左下挡块
6008A-1




左棱角固定块
6009A-1



左平针刀
6010A-1

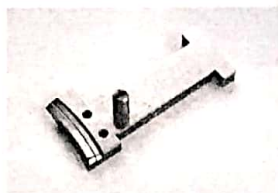


橡筋刀1号
6011A-1

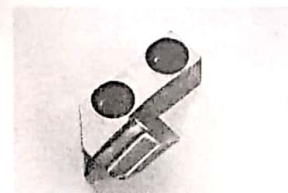 


橡筋刀2号
6012A-1



 
高脚超针刀
6013A-1

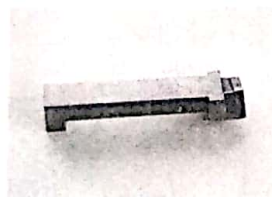


起针刀
6014A-1

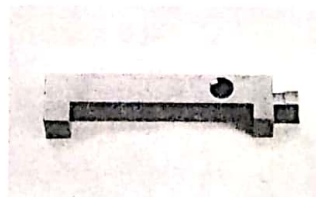 


压针刀
6015A-1

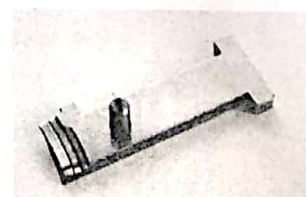 

扎口分针刀
6016A-1

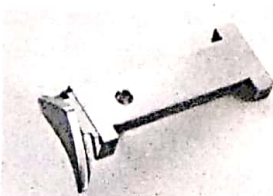 

右三角
6017A-1

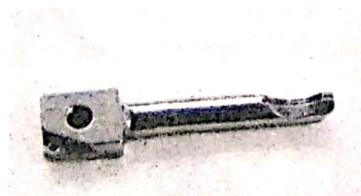 

左挑针头
6018A-1



 
右挑针头
6019A-1




左挑针导板
6020A-1



右挑针导板
6021A-1

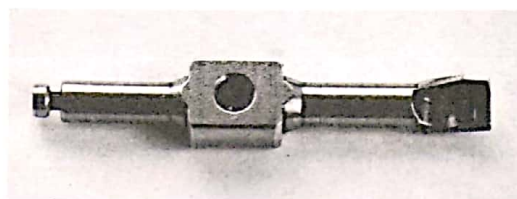


左揿针头
6022A-1

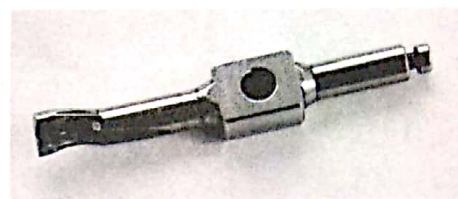 


右揿针头
6023A-1



 揿针导板
6024A-2

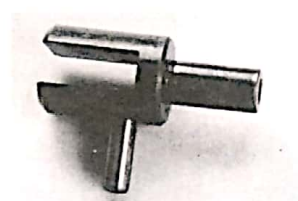

揿针芯子
6025A-2

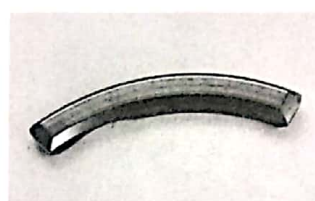 

1号基座上挡块
6026A-1



1号基座下挡块
6027A-1



1C.2C棱角
6028A-1



1C.2C平针刀
6029A-1



 
3C棱角
6030A-1




4C.5C棱角
6031A-1




4C.5C平针刀
6032A-1

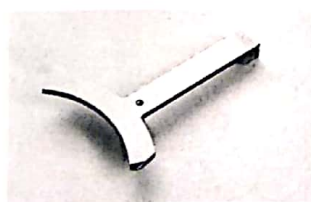

1号提花刀
6033A-1

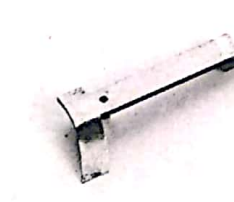 

2号提花刀
6034A-1

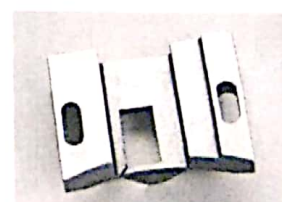 

方梭板
6035A-1



 
2C复位刀
6036A-1



上钢圈
6037A-1




中钢圈
6038A-1

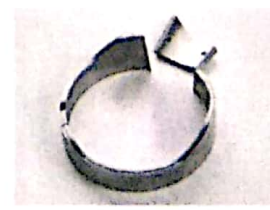


下钢圈
6039A-1

 
座类

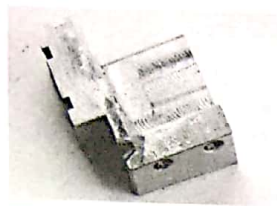


中棱角座
6050C-1

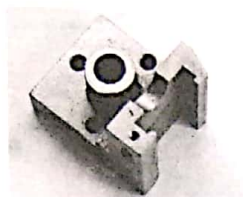 


左棱角座
6051C-1

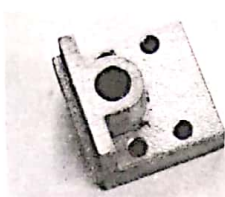 


右棱角座
6052C-1

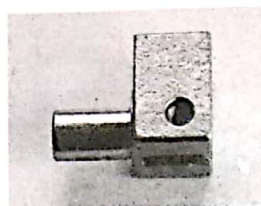 


左挑针座
6053C-1

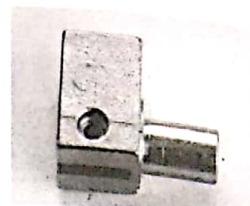 


右挑针座
6054C-1

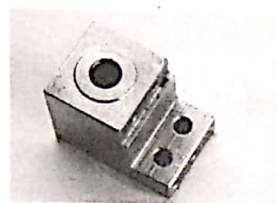 

左撇针座
6055C-1

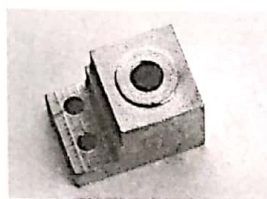 


右撇针座
6056C-1

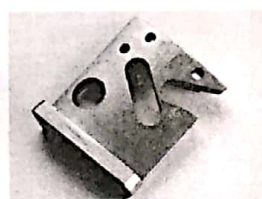 

1号基座
6057C-1



 
2号基座
6058C-1

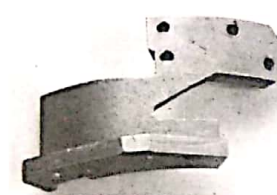

3号基座
6059C-1



 辅梭座-1
6060C-3

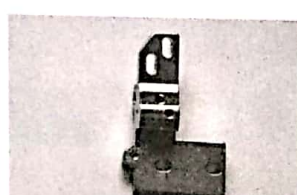

辅梭座-2
6060C-2



 
上离合座
6061C-1




下离合座
6062C-1




断针调节滑座
6063C-1

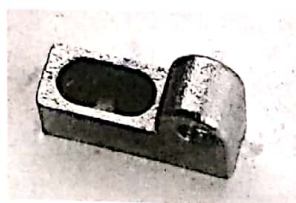


蝴蝶门座
6064C-2

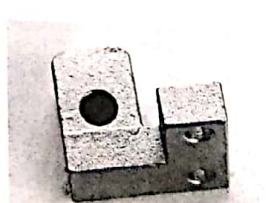 


高低控制座
6065C-1

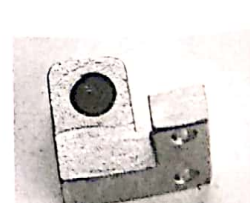 

升降固定座
6066C-1

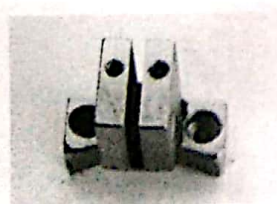 


离合控制座
6067C-1

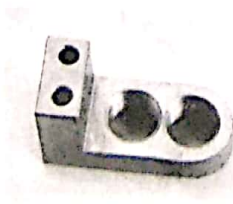 


离合气缸座
6068C-1



 
离合控制器
6069C-1

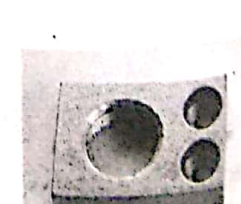

1C-5C气缸固定座
6070C-2

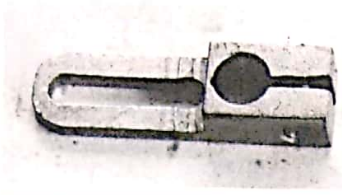 


探针固定座
6071C-1

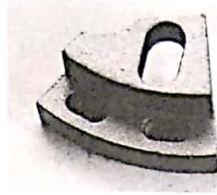 


哈夫盖调节座
6072C-1



 
橡筋架连接座
6073C-1

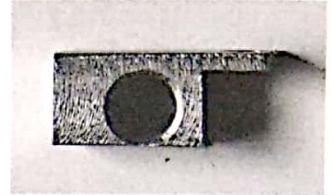

橡筋气缸固定座
6074C-1

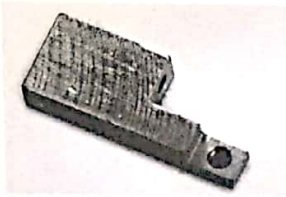 

开针器调节座
6075C-1

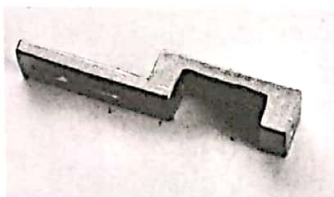 

升降调节座
6076C-1



同步带调节座
6077C-1



吸风嘴座
6078C-1



快慢调节座
6079C-1



 
棱角控制块
6080C-1



橡筋马达座
6081L-1



升降板座
6082C-1

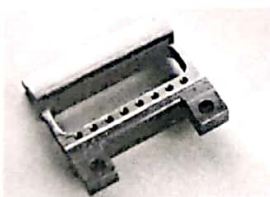

主梭气缸座
6091L-1



 
断针固定座
6092L-1



升降气缸座
6093L-1



哈夫气缸座
6094L-1

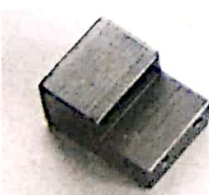

机头定位座
6095L-1



棱角偏心轮
6096S-1




橡筋输送轮
6097L-1




蝴蝶门控制块
6098S-2


| 柱杆 |

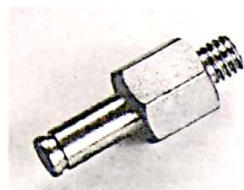 


压轮固定柱
6100S-1

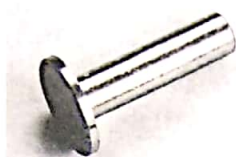 


主梭定位柱
6101S-3

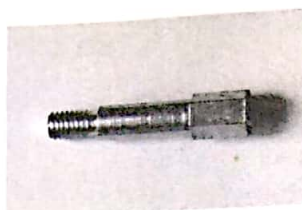 

左棱角控制柱
6102S-1

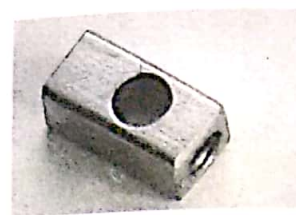 


小剪刀定位方柱
6103S-1

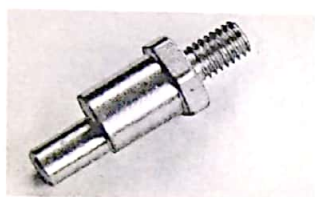 


橡筋梭固定柱
6104S-1



 
长机盖定位柱
6105S-1

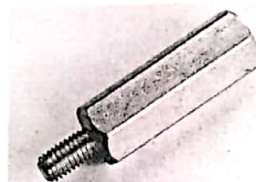


短机盖固定柱
6106S-1

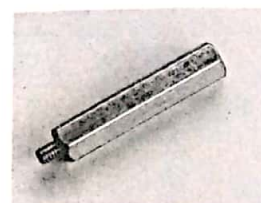 

导纱板定位柱
6107S-1

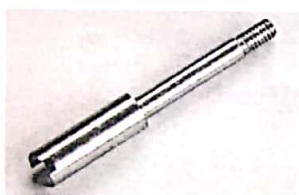 


换纱偏心柱
6108S-5

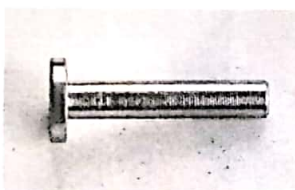 

换纱梭子柱
6109S-5



 蝴蝶门定位柱
6110S-2

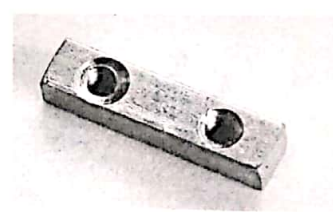

帽子盖定位柱
6111S-1



 
棱角控制间隔柱
6112S-1



控制板定位柱
6113S-1



机头支撑柱
6114S-1

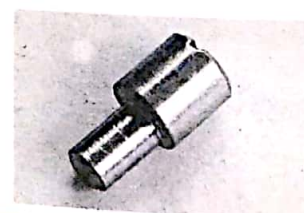


机头偏心短柱
6115S-1




橡筋梭调节柱
6116S-1



 橡筋架定位方柱
6117S-1

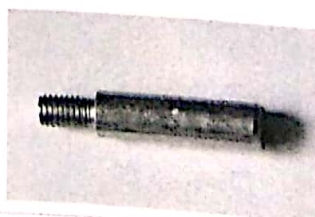

分数控制柱
6118S-1

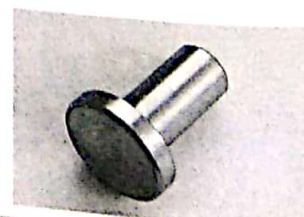 


升降间隔柱
6119S-1




上下罩油嘴
6120S-2



 机架连接销
6121S-1

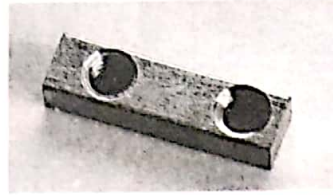

主梭气缸柱-1
6122S-6

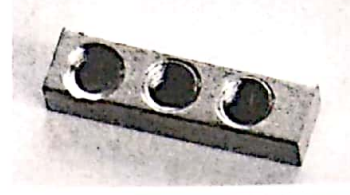 


主梭气缸柱-2
6123S-2




纱线柱
6124S-15



 压簧柱-1
6125S-9

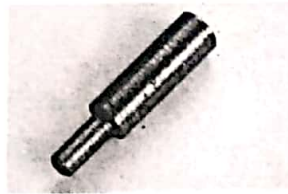

压簧柱-2
6126S-2

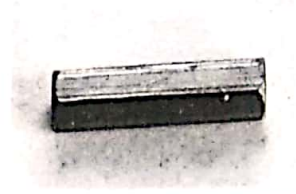 


长铜柱
6127S-10




主梭拉簧板
6128S-1



 
开针器
6129S-1

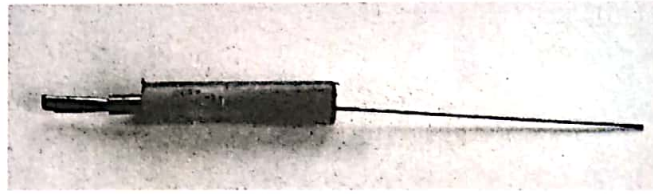

断针器结合件
6130S-1

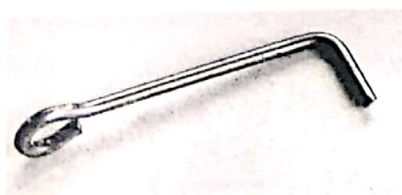 

压力接触杆
6131S-1

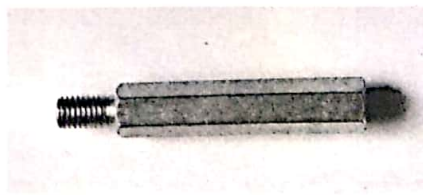 

废丝桶固定柱
6132S-2



出袜管固定柱
6133S-3


| 垫圈 |




大压簧盖
6150S-1



 同步轮压盖
6151S-1

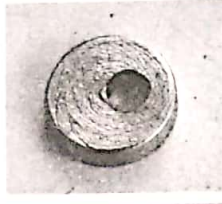


偏心垫圈
6152S-5

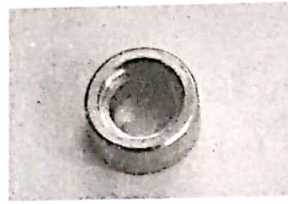 


离合滚圈
6153S-2



 哈夫盖定位圈
6154S-1

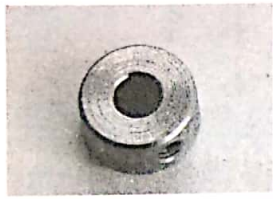

橡筋梭紧圈
6155S-1

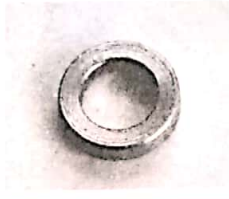 

橡筋轴承垫圈
6156S-1



选针器垫圈
6157S-12



辅梭垫圈
6158S-5



 
1号垫圈
6159S-5




2号垫圈
6160S-5




3号垫圈
6161S-5

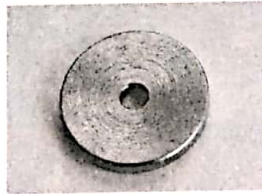

气阀箱垫圈
6162S-4

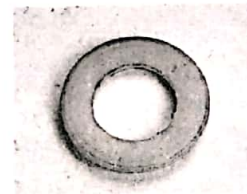 

油嘴垫圈
6163S-1

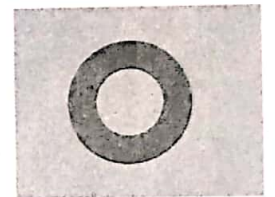 

哈夫盘铜垫圈
6164S-1



 
电机压轮盖
6165S-1



主梭铜垫圈
6166S-10




蝴蝶门挂钩
6167S-1

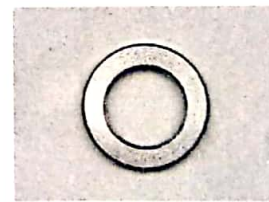

摇手柄垫圈
6168S-1



 
连接板螺丝
6170S-2

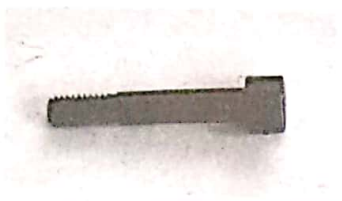

挑针头定位螺丝
6171S-2



 离合器滚圈螺丝
6172S-2

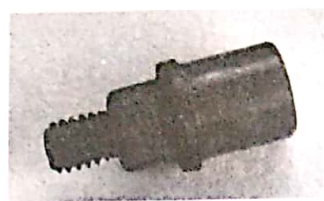

棱角轴承螺丝
6173S-1



 
棱角控制板螺丝
6174S-1



开针器螺丝
6175S-1



蝴蝶门螺丝
6176S-2

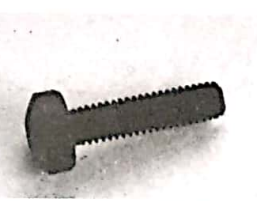


哈夫升降调节螺丝
6177S-1




挂勾螺丝
6178S-2



 
橡筋剪刀螺丝
6179S-1

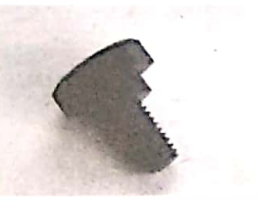

支撑板定位螺丝
6180S-1

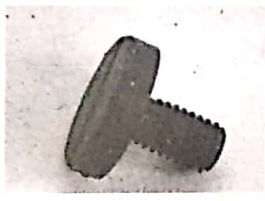 


挑针座螺丝
6181S-2

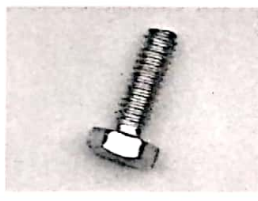 

左棱角调节螺丝
6182S-2



 离合器固定螺丝
6183S-2

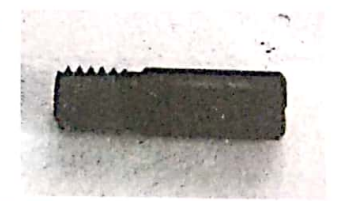

左棱角定位螺丝
6184S-2



 
快慢调节螺丝
6185S-2




橡筋架拉簧螺丝
6186S-2



弹簧螺丝-1
6187S-5

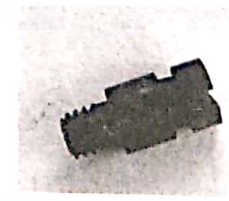

弹簧螺丝-2
6188S-5

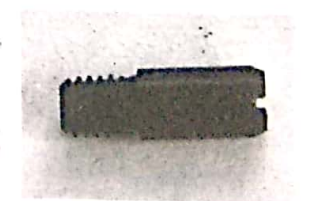 


闸刀定位螺丝-1
6189S-7



闸刀定位螺丝-2
6189S-2



 
手柄螺丝
6190S-1

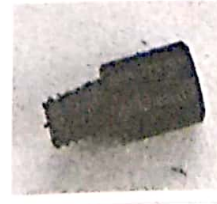


蝴蝶门定位螺丝
6191S-2



 油管螺丝
6192S-1

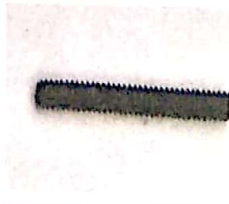


主梭调节螺丝
6193S-10

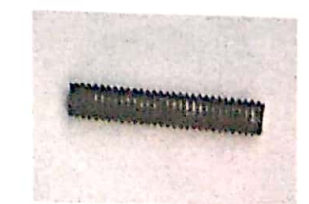 

前支架生克螺丝
6194S-2


| 台面 |

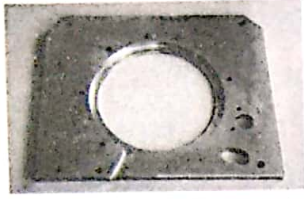 


上台面
6250T-1



 中圆盘
6251T-1

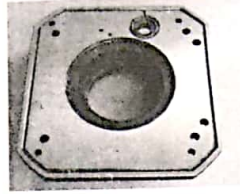


下台面
6252T-1

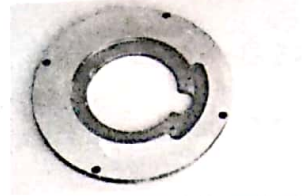 

下圆盘
6253T-1



 钢圈座
6254T-1

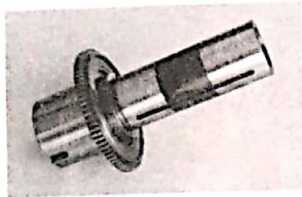


针筒芯子
6255T-1




针筒销子
6256T-1



 
分数弹子
6257T-3

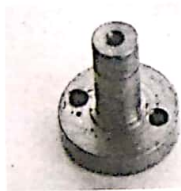


齿轮定位轴
6258T-1

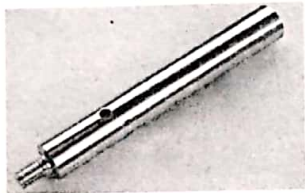 

台面固定柱
6259T-4

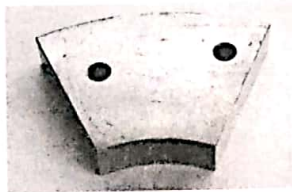 

1F底板
6260T-1

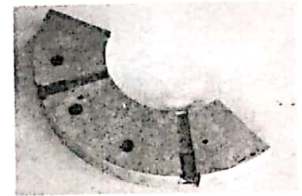 

伞形底板
6261T-1



带轮上罩
6262T-1



调节顶圈
6263T-1



 
同步轮
6265T-1



带轮下罩
6267T-1



铜管卡座
6268T-1

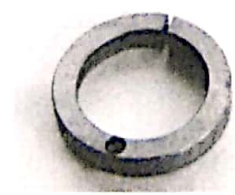

铜管紧圈
6269T-1



管座固定柱
6270T-3



圆筒轴承座
6271T-1



分数控制块
6272T-2



分数架固定座
6273T-3



 
分数架
6275T-1



摇手柄轴
6277T-1




摇手柄座
6278T-1

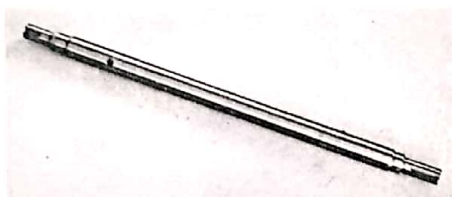

传动轴
6282T-1



 
传动轴盖
6283T-1

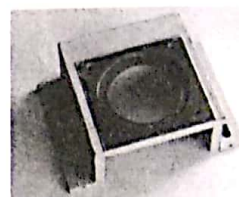

伺服电机架
6285T-1



 
分数架内圈
6286T-1

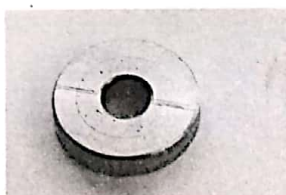


铜圈
6287T-1



 
棱角马达座
6288T-1

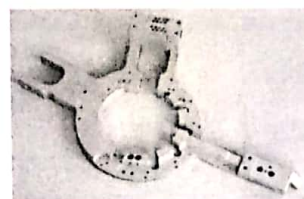

帽子盖
6290J-1

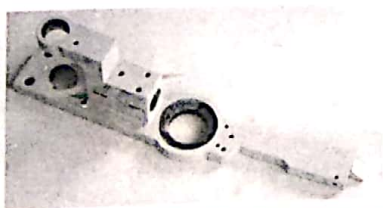 


机头主体
6291J-1

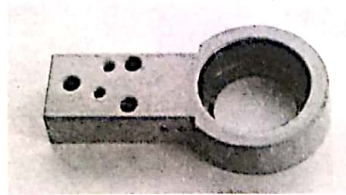 


机头调节座
6292J-1



 前支架
6293J-1

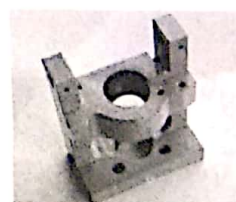

后支架
6294J-1

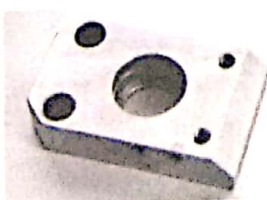 

连接座
6295J-1

 


并帽
6296J-1



止退垫圈
6297J-1

板件

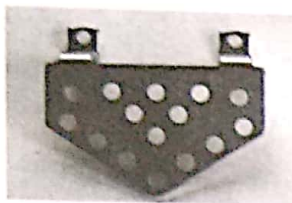

主梭导纱板
6300S-1



 
剪刀控制板
6301S-1



剪刀气缸固定板
6302S-1



挑针气缸固定板
6303S-1

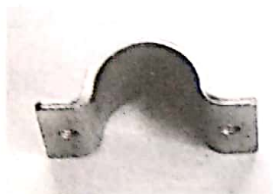


半圆紧圈
6304S-1




蝴蝶门
6305S-2



 左棱角压簧板
6307S-1

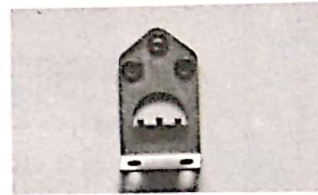


纱导纱板
6308S-5

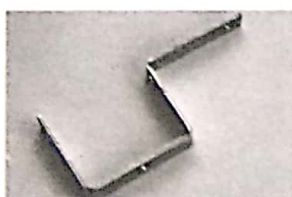 

橡筋导纱板
6309S-1



 
废丝筒固定板
6310S-2

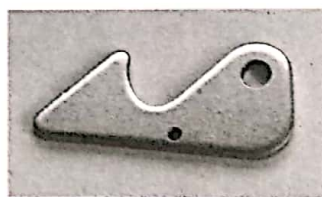

机头定位勾板
6311S-2



 机头支撑板
6312S-1

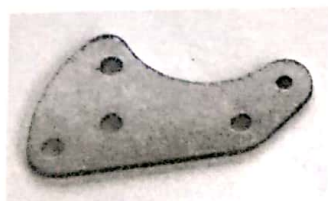


橡筋梭固定板
6313S-1



开针控制板
6314S-1



 开针器固定板
6315S-1

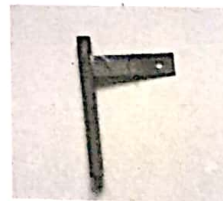

扎口吹气管
6316S-1



主梭调节板(中)
6317S-4



 
主要调节板(短)
6318S-4



圆形连接板(左)
6319S-1




圆形连接板(右)
6320S-1

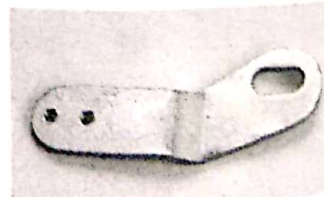


右挑针连接板
6321S-1



 左挑针连接板
6322S-1

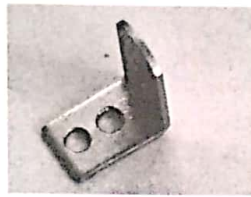


油刷固定板
6323S-1

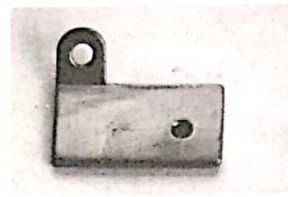 


毛刷固定板
6324S-1



 
蝴蝶门气缸板 (右)
6325S-1

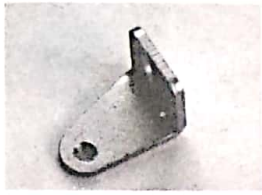


蝴蝶门气缸板 (左)
6326S-1

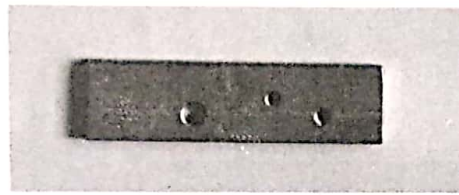 


下油管固定板
6327S-1

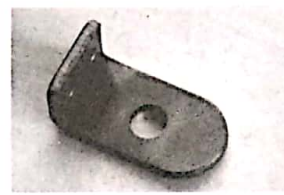 


分数信号固定板
6328S-1

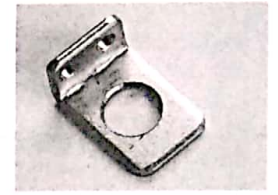 

棱角信号固定板
6329S-1

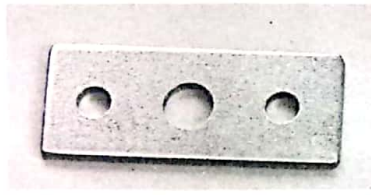 


圈信号固定板
6330S-1

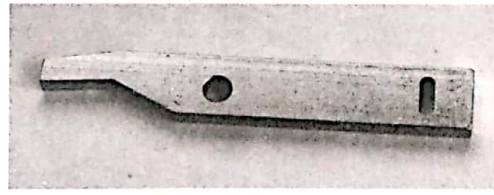 

棱角控制板
6331S-1



 
探测绝缘板
6333S-1

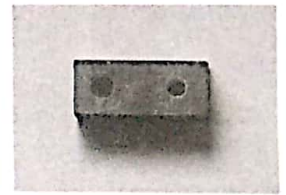


剪刀绝缘板
6334S-1



 
袜篮固定板
6335S-1

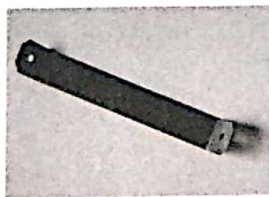


出袜管固定圈
6336S-3

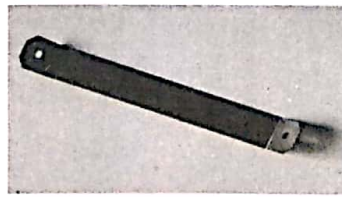 


废丝桶固定圈
6337S-2

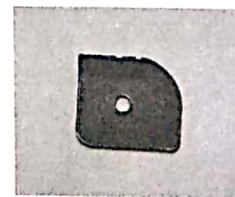 

哈夫盖出纱板
6338S-1

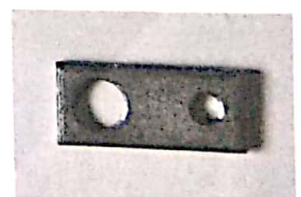 

左棱角控制板
6339S-1

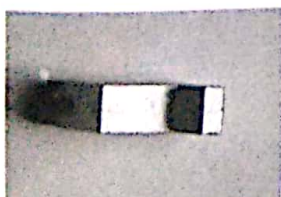 

离合器拨车气缸板
6340S-1



棱角密度压板
6341S-1

针和梭子



哈夫针
42LL-50



 
哈夫针
42LS-50




哈夫针
42RL-50



哈夫针
42RS-50

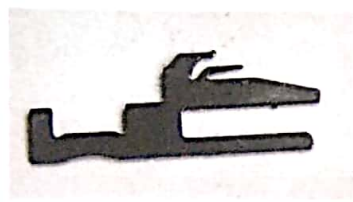

生克片
537L-100

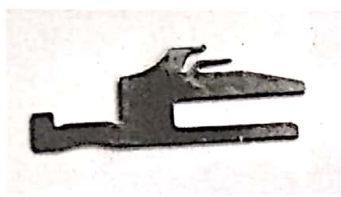 

生克片
537S-100



 
辅梭 (右)
6400-5




辅梭 (中)
6401-4




辅梭 (左)
6402-5

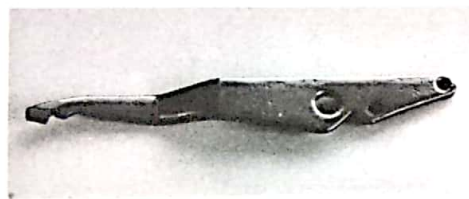

橡筋梭-1
6403-1

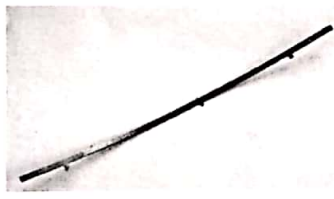 

提花针
6412-150

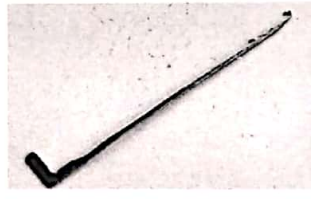 

袜针
7175-1-100



袜针
7175-3-100



主梭1号
6404-1



主梭2号
6405-1



主梭3号
6406-1



主梭4号
6407-1



主梭5号
6408-1



 
主梭6号
6409-1




主梭7号
6410-1




主梭8号
6411-1

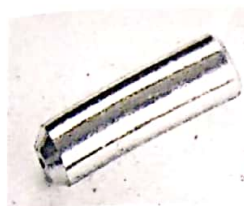


连接短轴
6200S-1

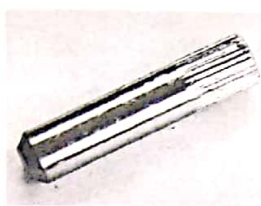 


连接长轴
6201S-1

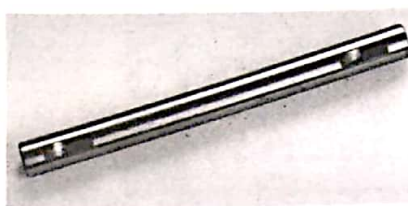 


横轴
6202B-1

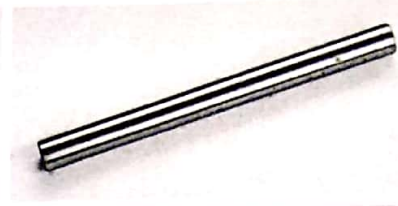 


主梭轴
6203B-1

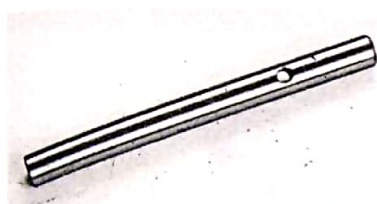 

橡筋架轴
6204S-1

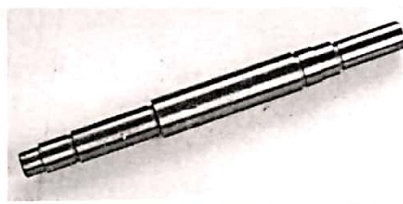 

竖轴
6205B-1

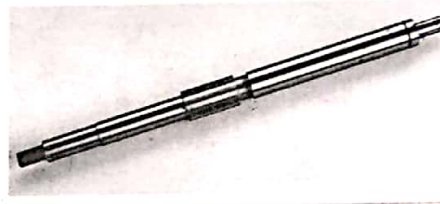 

哈夫轴
6206B-1



键槽离合器
6220B-1



传动轴套
6221S-1



哈夫盖定位套
6222B-1



滚花套
6223S-1



横轴承套
6224S-2



竖轴下套
6225S-1



同步带压套
6226S-1



主梭定位套
6227S-2



气压表套
6228S-1




哈夫轴套
6228S-1




压簧套
6229S-1


| 专用件 |

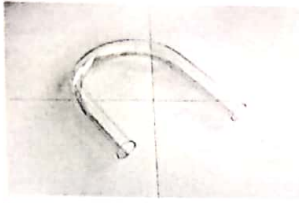 


出袜管-1
6413-1

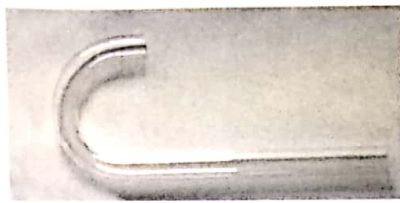 


出袜管-2
6414-1

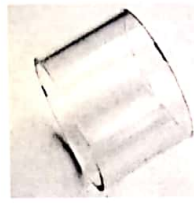 


出袜子管-3
6415-1

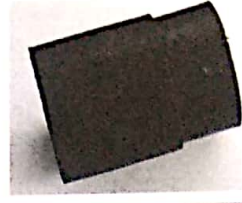 


出袜管皮套
6416-1

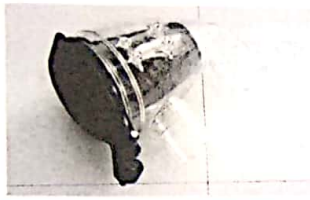 

出袜口
6417-1

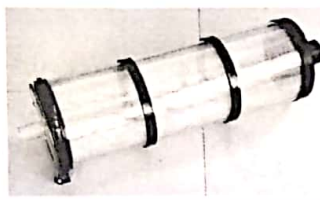 

废丝筒
6418-1

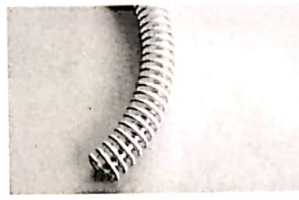 

废丝软管
6419-1



 
吸风管
6420-1




风门开关
6421-1




卡圈
6422-1

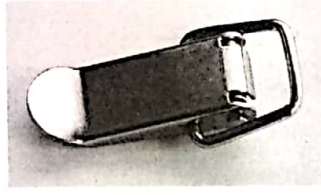

门扣
6423-1

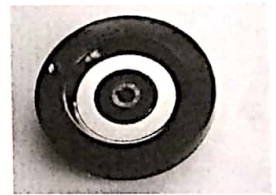 

手摇轮
6424-1

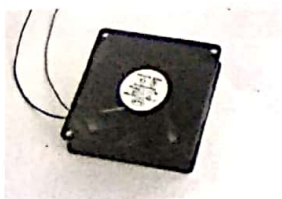 


风扇
6425-1



油排
6426-1



 
生克罩
6427-1

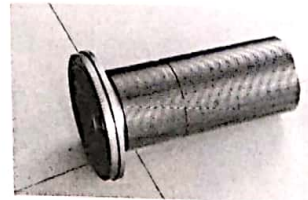

针筒
6428-1



 
哈夫盖
6429-1

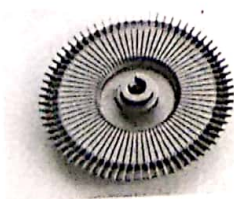


哈夫盘
6430-1



 圆盘剪刀
6431-1

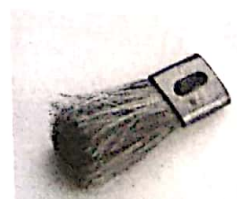

毛刷
6432-2

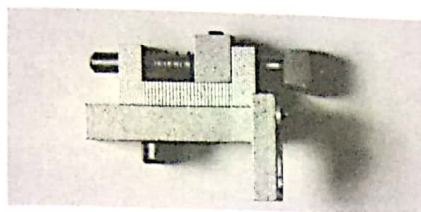 

连刀架
6433-1



橡筋剪刀
6434-1



 
探针
6435-1




气阀芯子
6436-1




气阀线圈
6437-1

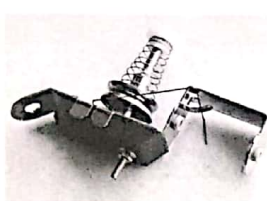

断线制停器
6438-1

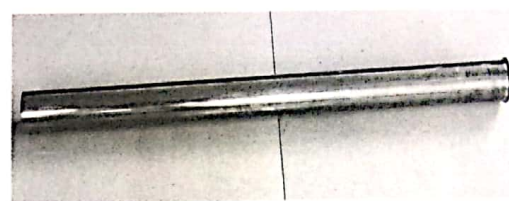 

铜喇叭
6439-1

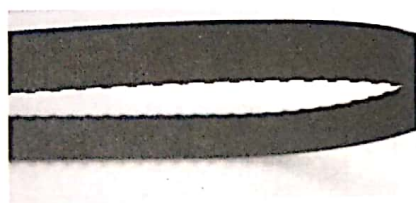 

电机同步带
330L × 100-1



 
剪刀同步带
180XL-1



氧化铝陶瓷
直径6mm-35




氧化铝陶瓷
直径11mm-8

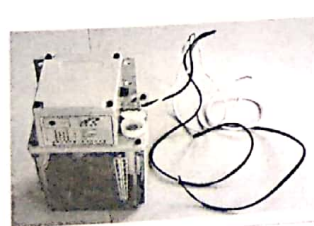

注油机108c × 5道-1



 
把手-1

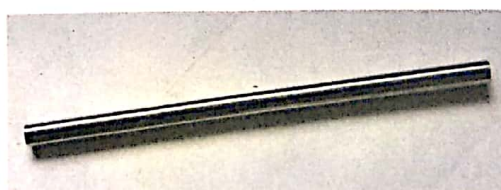

不锈钢管
直径25 × 50mm-1



 管帽
直径25mm-1

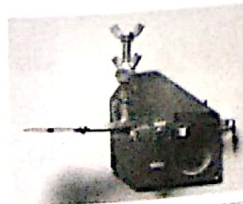

橡筋输送架-1



连接管-1



选针器-6



选针器刀片(左)




选针器刀片(右)



选针器线圈

| 气动 |

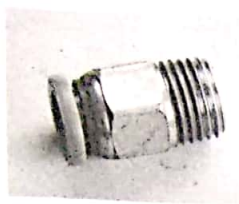 

2"× ϕ 8-1



2"×XY6-1




PC4-M5-C-5



PI4-M5-C-20



 PL4-M5-C-20

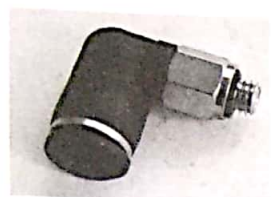

PL6-M5-C-2




PT6-M5-C-4




PY-CO4-5



 WTC4-M5-C-65

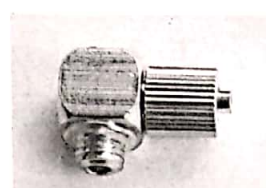

WTL4-M5-C-5

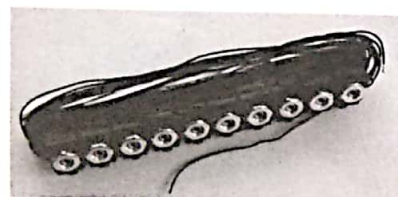 


电磁阀组件 (10孔)
LQ110-10F-2



二连件
AFC-2000-1



 
气压表-1

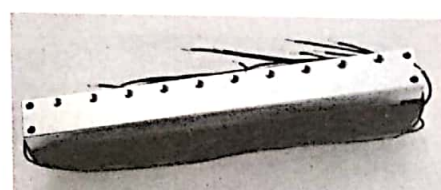


电磁阀组件 (10孔)
LQ110-10F-4



 断针气缸座
LQ-TZD-1

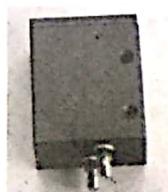


换纱气缸座
LQD-2M-1

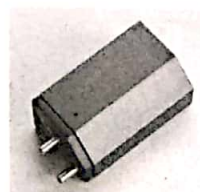 


右起毛刀气缸座
LQD-2MXB-1



 
换纱气缸座 (左)
LQD-3M-2

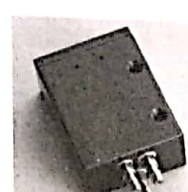

换纱气缸座 (右)
LQD-3M-2

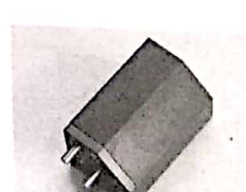 


左起毛刀气缸座
LQD-3MXB-1

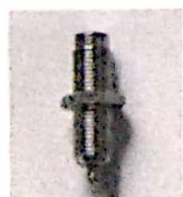 


生克罩气缸
LQJ6×15D-1



 棱角密度气缸
LQJ10×15M-1

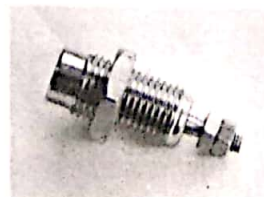

开针器气缸
LQJ6×5M-1

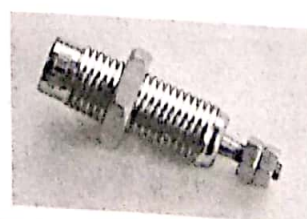 

挑针头气缸
LQJ6×10-M-1



掀针气缸
LQJ6×10d-2



哈夫起针气缸
LQJ8×5-6



 
离合器控制气缸
LQJ8×7-2




橡筋剪刀
提花平针气缸
LQJ10×10-3




风门气缸
LQJ10×20-1

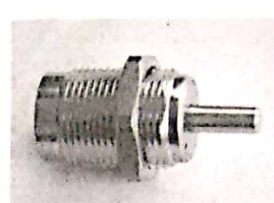

升降气缸
LQJ16×10-1

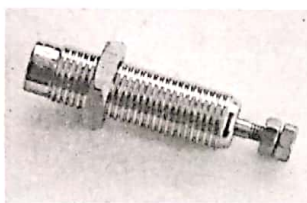 


橡筋梭气缸
LQJ6×15-M-3

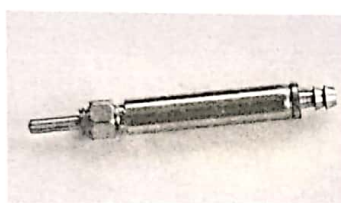 

蝴蝶门气缸
LQW4×5-2



 
主梭外置气缸
LQW6×10-M-2

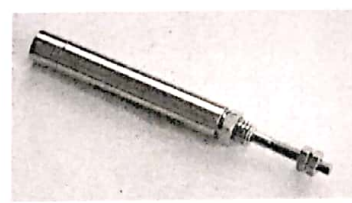


主梭外置气缸
LQW6×15-M-6



 
主梭外置气缸
LQW6×20-M-2

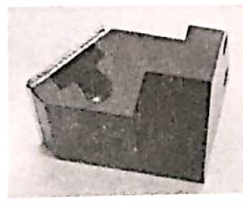


高脚超针气缸座
PB-CZD-5-1

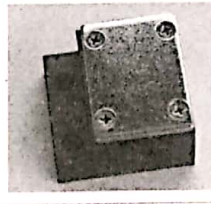 


右三角气缸座
PB-YFLT-4-1

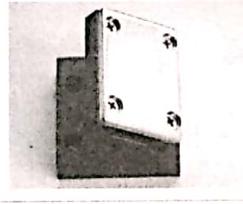 


左平针刀气缸座
PB-PZD-3-1

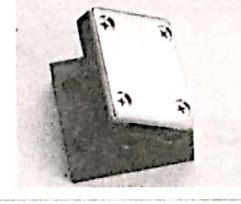 


扎口刀气缸座
PB-FZD-5-1

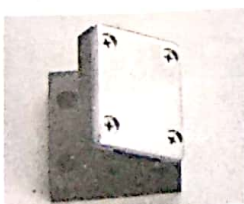 


橡筋刀气缸座
PB-XJD-4-1

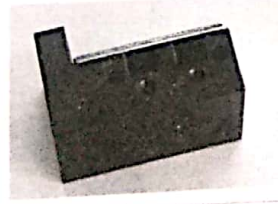 


双刀气缸座
PB-TQD-4-1

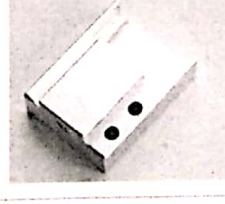 


右棱角气缸座
LQD8001-1

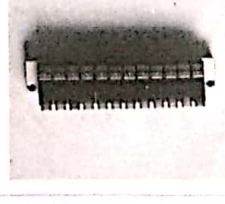 


电磁阀
WF-23-3M16F-1

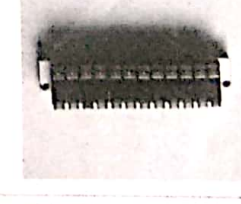 


电磁阀
WF-23-3M12F-1

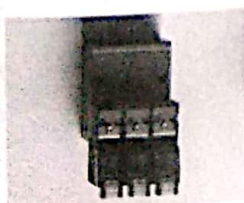 


电磁阀
LQD-3XAF-3

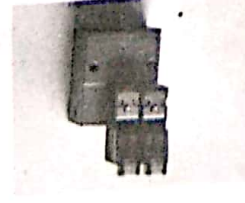 

电磁阀
LQD-2XAF-2

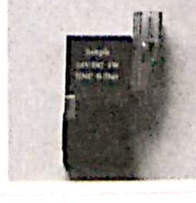 

电磁阀
WF-23-3M1F-1

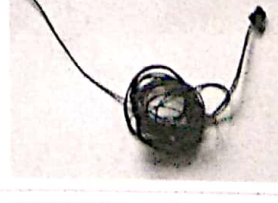 

电磁阀线-1.3米-1


| 弹簧 |




左棱角压簧
0.6×4.7×38-1



 
刀座压簧
0.6×4.9×44-6

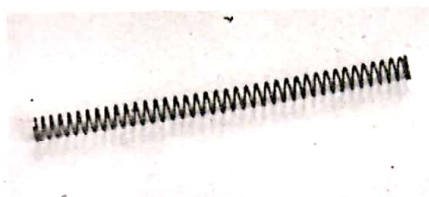


平针刀压簧
0.6×4.9×76-1

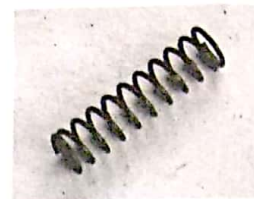 


小剪刀压簧
0.6×5.3×20-1

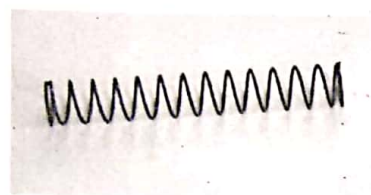 


手柄压簧
1×15×100-1

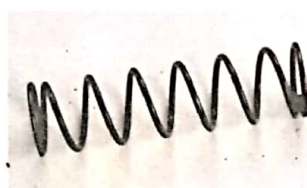 


哈夫盖压簧
2×22×78-1

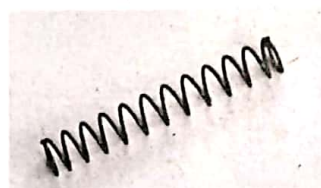 

断针气缸压簧
0.4×4×25-1

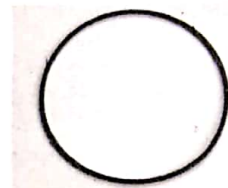 

针筒簧
0.6×2.6×278-1

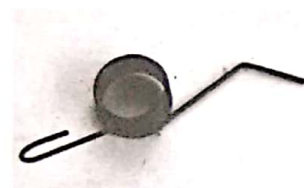 

扭簧
1×11.5



开针器板
生克眉毛拉簧
0.4×4×28-3



主梭拉簧
0.4×4×90-8



帽子盖拉簧
0.8×6×28-2



挑针拉簧
0.35×3×18-2



撇针拉簧
0.3×4.5×26-2



辅梭拉簧
0.3×3.3×17-16



开针器拉簧
0.4×4×18-1



起毛刀拉簧
0.4×4×24-4



离合器拉簧
0.7×6×25-1



右棱角拉簧
0.7×6×28-1



 
支撑板拉簧
0.7×6×32-1




针筒拉簧
0.7×6×35-6



橡筋架拉簧
0.7×6×60-1

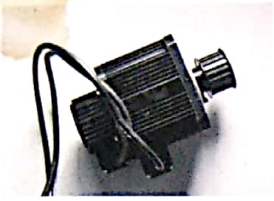

伺服电机
65001-1

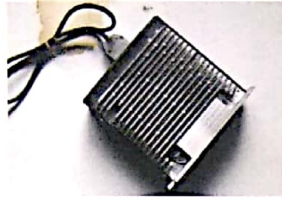 

驱动器
65002-1



 
控制箱
65003-1



气阀线
65004-1



选针器线1#-6#
65005-3

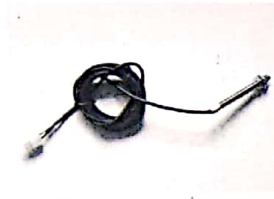

圈信号探头线
65006-2



密度探头线
65007-1



橡筋马达线
65008-1



气阀箱连接线
65009-1



1、2、3、4报警线
65010-2



9、10报警线
65011-1



 
电脑电源线
65012-1




5、6、7、8线架线
65013-2




U盘
65014-1

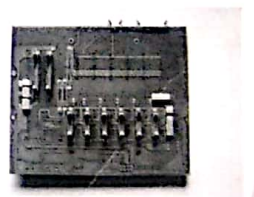


底板
65015-1

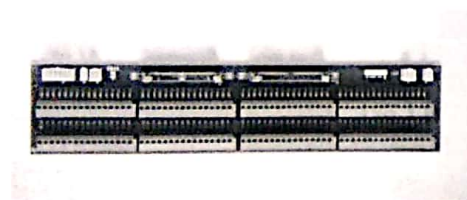 


气阀箱板
65016-1

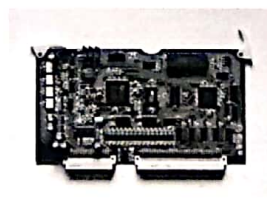 


主板
65017-1

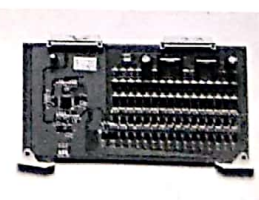 


气阀板
65018-1

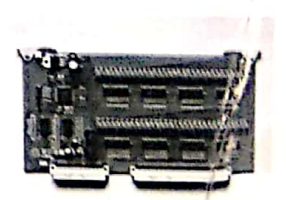 

选针器板
65019-1

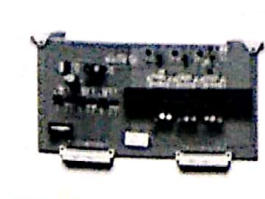 


马达板
65020-1

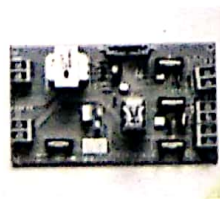 

油泵板
65021-1



 步进电机-直径8mm
65022-1

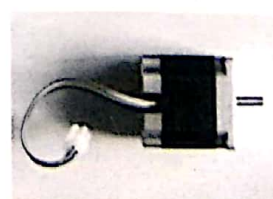

步进电机-直径6.3mm
65023-1